

INSTALLATION GUIDE

CP030203913

[for Ford Expedition 2025-2026]


Thank You for Your Purchase! Need help? Contact us!

Parts List:

- 4x Self-tapping screws

Tools Needed:

- Punch tool
- Phillips Screwdriver

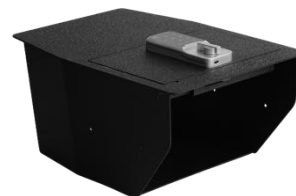

Before You Begin:

- ✓ **Check Parts** – Verify all included components before starting.
- ✓ **Review Instructions** – Read this guide thoroughly before installation.

Safety Notice:

 Always **set your password** with the **door open** to avoid accidental lockouts. **Test** the password 3–5 times to ensure proper operation **BEFORE** installing the safe in your vehicle.

Installation Steps

1. Prepare Armrest Box

- ▶ Remove all items from the armrest box

2. Prepare Safe

- ▶ Open safe door, remove the padding, and set it aside.

3. Position Safe

- ▶ Place the safe into the console armrest box.

4. Locate the Reserved Holes

- ▶ Identify the reserved holes on the wall of the safe.
- ▶ Use the provided punch tool to create pilot holes in the console box wall through these reserved holes.

5. Secure Safe

- ▶ Place the self-tapping screws into the holes created in the previous step.
- ▶ Use included Screwdriver to secure screws

6. Place the padding

- ▶ Return the padding (removed in Step 2) to the interior of the safe.

 **Caution:** Over tightening may damage console