INSTALLATION INSTRUCTIONS

CP030201554

[2024-2026 Ford Ranger]

Thank you for purchasing our products! Please contact us for any issues!

Accessories List:

- 8 PCS Self-Tapping Screws
- 4 PCS Acorn Nuts

Tools Needed:

- Phillips Screwdriver
- punching cone
- Wrench

Note 1 When you receive this product, we recommend that you should check the accessories before the installation.

Note 2 The password should be set with the DOOR OPEN to test the lock effectively without locking

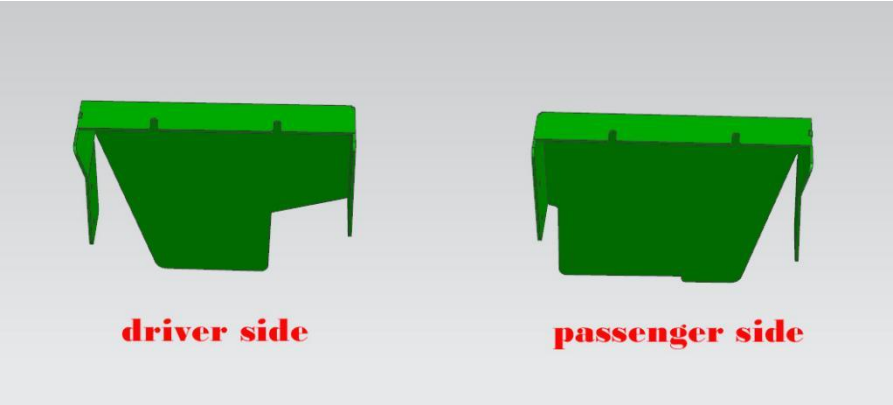

yourself out.

Safe Installation:

STEP 1 Clear out the contents of the center console for now, including the factory mat at the bottom of the armrest box.

STEP 2 Place the two side brackets into the armrest box, pay attention to the brackets, the right, and left brackets are different, please see above Fig a.

STEP 3 Put the top panel of the safe on the brackets, and make sure the studs of the top panel are inserted into the reserved holes.

STEP 4 Open the lid and hand the acorn nuts on the studs of the panel and use the wrench to tighten the acorn nuts, **DO NOT OVER-TIGHTEN.**

STEP 5 Use the punching cone to poke holes through reserved holes at the brackets into the back and front of the armrest box, and use a Phillips screwdriver to tighten the screws. **DO NOT OVER-TIGHTEN, over-tightening will result in armrest box damage**.

STEP 6 Enjoy your purchase.