INSTALLATION GUIDE
CP030202854
[for **Ford Bronco 2025+**]

Thank You for Your Purchase! Need help? Contact us!

Parts List:

- 4x Self-tapping screws
- 4x Acorn Dome Cap Nut
- 1x Pin Tool
- 2x Keys

Tools Needed:

- Punch tool
- Phillips Screwdriver

Before You Begin:

✓ **Check Parts** – Verify all included components before starting.

✓ **Review Instructions** – Read this guide thoroughly before installation.

Safety Notice:

🔒 **Always set your Fingerprint codes with the door OPEN** to prevent accidental lockouts. Test the codes 3-5 times to ensure proper function.

Installation Steps

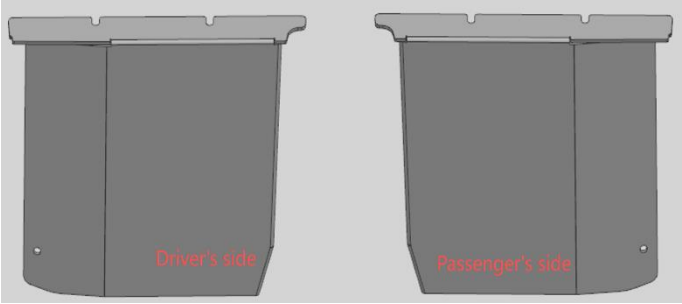

1. **Prepare Armrest Box**
   - Remove all items from the armrest box
2. **Prepare Safe**
   - 1x Top panel, 2x side brackets
   - Note the brackets are different

3. Position the brackets

- Insert the brackets into the armrest box.

4. Position the top panel

- Align the top panel studs with the two holes on top of the brackets, then secure the panel with the brackets using the included acorn dome cap nut.

5. **Secure the brackets**

- Use the punch tool to mark pilot holes through the bracket holes onto the box wall.
- Place the self-tapping screws into the pre-drilled holes created and use included screwdriver to secure screws. Finish the installation.

⚠ **Caution:** Overtightening may damage console